

GUIDE TO B2B E-HUB SELF-**ACCREDITATION**

EXPLAINS HOW TO OBTAIN ACCREDITATION TO BECOME A **B2B E-HUB PARTICIPANT**

Version: 1.01





Published: Thursday, 7 December 2017





IMPORTANT NOTICE

AEMO has prepared this Guide to B2B E-Hub Self-Accreditation (Guide) to provide guidance on the use of the B2B E-Hub Self-Accreditation under the National Electricity Rules (Rules), as at the date of publication.

No reliance or warranty

This document does not constitute legal or business advice, and should not be relied on as a substitute for obtaining detailed advice about the National Gas or Electricity Law, the Rules or any other applicable laws, procedures or policies. While AEMO has made every effort to ensure the quality of the information in this Guide, neither AEMO, nor any of its employees, agents and consultants make any representation or warranty as to the accuracy, reliability, completeness, currency or suitability for particular purposes of that information.

Limitation of liability

To the maximum extent permitted by law, AEMO and its advisers, consultants and other contributors to this Guide (or their respective associated companies, businesses, partners, directors, officers or employees) are not liable (whether by reason of negligence or otherwise) for any errors, omissions, defects or misrepresentations in this document, or for any loss or damage suffered by persons who use or rely on the information in it.

Trademark notices

Microsoft is a trademark of Microsoft Corporation in the United States and/or other countries.

Oracle and Java are registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Documents made obsolete

The release of this document changes any version of the Guide to B2B E-Hub Self-Accreditation.

Distribution

Available to the public.

Document identification

Business custodian: Manager, Metering

IT custodian: Manager, Retail Electricity Systems Prepared by: Technical Writers, Market Systems Last update: Thursday, 7 December 2017 15:59

Version history

Version 1.01 Updated to incorporate feedback

Further information

For further information, please visit www.aemo.com.au or contact:

AEMO's Support Hub

Phone: 1300 AEMO 00 (1300 236 600), Email: supporthub@aemo.com.au

Feedback

To suggest corrections or improvements to this document, please contact AEMO's Support Hub.

© 2017 AEMO ii





CONTENTS

Chapt	er 1 Introduction	. 1
	Purpose	. 1
	Audience	1
	How to use this guide	1
	What's in this guide	. 2
	System requirements	. 3
	Supported web browsers	3
	B2B Self-Accreditation user rights access	. 4
	Using set participant	5
Chapt	er 2 About B2B E-Hub Self-Accreditation	6
	Why obtain accreditation	. 6
	Where to complete self-accreditation	. 6
	Can accreditation be revoked?	7
	Re-accreditation	. 7
	Is there exemption from accreditation?	7
	Is there exemption from self-accreditation?	. 8
	Accreditation process	9
	Stage one accreditation testing	. 11
	Stage 2 accreditation testing	.12
	Application rejected	. 13
	Accreditation granted	.13
	Participant IDs	.13
	Market roles	. 14
Chapt	er 3 Complete Self-Accreditation	.15
	Set up B2B Delivery Method	
	Access B2B Self-Accreditation	.15
	Complete the tests	16
	Monitor test progress	.18
	Submit test results to AEMO	.20
Needi	ng Help	22
	Related resources	
	Setting a participant	
	AEMO's Support Hub	
	Feedback	
Index		26
uon	***************************************	





CHAPTER 1 INTRODUCTION

Purpose	1
Audience	
How to use this guide	1
What's in this guide	
System requirements	
Supported web browsers	
B2B Self-Accreditation user rights access	4
Using set participant	

Purpose

This guide assists intending *B2B e-Hub Participants* (participants) to understand the *B2B e-Hub* (e-Hub) self-accreditation process.

Read this guide in conjunction with the B2B e-Hub Participant Accreditation and Revocation Process and the Shared Market Protocol Technical Guide.

Audience

This guide is relevant to providers of metering services, retailers, Meter Data Providers, Metering Coordinators, Embedded Network Managers, Meter Providers, *distribution networks* requesting those services, and third-party B2B participants.

A secondary audience is participant administrators wanting to know the user rights management (URM) entity for their participant users to access the B2B E-Hub Self-Accreditation interface.

How to use this guide

This document is written in plain language for easy reading. Where there is a
discrepancy between the Rules, NEL or information or a term in this document,
the Rules and NEL prevail.





- If there are any inconsistencies between the MSATS Procedures and the B2B Procedures, the MSATS Procedures prevail.
- Diagrams are provided as an overview. In case of ambiguity between a diagram and the text, the text prevails.
- Text in this format indicates a resource on AEMO's website.
- Text in this format indicates a direct link to a section in this guide.
- Glossary terms are capitalised and have the meanings listed against them in the Guide to MSATS and B2B Terms.
- *Italicised terms* are defined in the NER. Any rules terms not in this format still have the same meaning.
- Actions to complete in the web portal interface are bold and dark grey.
- · References to time in:
 - The Retail Electricity Market Procedures (except the B2B Procedures) are to Australian Eastern Standard Time (AEST).
 - The B2B Procedures refer to the local time applicable at the Site where a B2B Transaction relates.
- The expressions within one Business Day or next Business Day in the B2B Procedure: Service Order Process mean by 11:59 pm the next Business Day.
- References to currency are to Australian dollars.

What's in this guide

About B2B E-Hub Self-Accreditation on page 1 provides an overview of B2B E-Hub Self-Accreditation, why you need it, and how and where to obtain it.

Complete Self-Accreditation on page 1 assists with using the B2B E-Hub Self-Accreditation interface, how to access it, how to complete the tests, monitor test progress, and how to submit your tests to AEMO.

Needing Help on page 22 provides a list of related resources, how to set a participant, information about contacting AEMO's Support Hub, and how to provide feedback.





System requirements

B2B E-Hub Self-Accreditation is accessed using a web browser and requires:

- Mandatory MarketNet access for Business to Market (B2M) and where the applicant wants to use FTP for B2B.
 - You can find the MarketNet Connection Request on AEMO's website.
- Optional MarketNet access or an internet connection to use the API Gateway for B2B.

For more details, see **Guide to Information Systems** on AEMO's website.

- A user ID and password, provided by your company's participant administrator (PA). For more details, see Guide to User Rights Management.
- User rights provided by your company's PA, see User rights access on page 1.
- The MSATS Portal URLs:
 - Pre-production: https://msats.preprod.nemnet.net.au/msats/
 - Production: https://msats.prod.nemnet.net.au/msats/

Supported web browsers

B2B E-Hub Self-Accreditation runs on both Windows and Unix-like operating systems. To access the MSATS web portal, AEMO recommends the following web browsers:

Browser	Platform	Current	More information
Microsoft Internet Explorer	Windows	IE11	https://www.whatismybrowser.com/guides/the-latest- version/internet-explorer
Microsoft Edge (Microsoft recommended)	Windows 10	Edge	https://www.microsoft.com/en-au/windows/microsoft-edge
Google Chrome	All platforms	62 (Dec 2017)	https://www.whatismybrowser.com/guides/the-latest-version/chrome





B2B Self-Accreditation user rights access

Your company's participant administrator (PA) grants you permission to use MSATS Batch Handler Transactions and Interactive web applications in the MSATS web portal.

The entity required for access is:

• B2B e-HUB Self-Accreditation

The entity for access to your chosen e-Hub Interface: For more details about participant administration and user rights access, see Guide to User Rights Management.

- Batch: Allows the use of the Batch Transaction Handlers.
- Interactive: Allows access to the B2B Browser and Web Services.

You may also need the following entities to interact with the B2B Responder and other MSATS functionality to complete your accreditation tests:

B2B Directory Inbox	Access to the B2B inbox to place B2B messages or acknowledgements.
B2B Directory Outbox	Access to the B2B outbox containing received files.
B2B Directory Archive	Access to the B2B Archive to view acknowledged zip files.
B2B Transaction Log	Access to all the transactions the B2B e-Hub handled.
B2B Activity Log	Access to the log that records actions within the B2B Browser.
B2B Flow Control Information	Access to view information about water marks and stop file details.
B2B Auto Delete Status	Access to view the automated process to delete ZIP and ACK files.
B2B Participant Status Report	Access to the last modified or oldest ZIP or ACK in the B2B inbox or outbox folders.
B2B Hub Dashboard	Access to the number of files in each state, the action required to move the files to the next state, and who is responsible for performing the next action.
B2B Protocol and Transforms	Access to change the B2B Delivery Method or nominate the aseXML sending or receiving schema.





B2BR Create Transactions	Access to create transactions in the B2B Responder.
B2BR Search Transactions	Access to search own transactions in the B2B Responder.
B2BR Search All Participants Transactions	Access to search all participant transactions in the B2B Responder.
B2BR Paste Transactions	Access to paste XML transaction messages into the B2B Responder.

For more details, see Guide to MSATS B2B.

Using set participant

Where a Participant User has rights assigned by more than one participant ID, they choose the participant they represent, using the **Set Participant** option in the web portal.

For help, see Setting a participant on page 22.



CHAPTER 2 ABOUT B2B E-HUB SELF-ACCREDITATION

Why obtain accreditation

Accreditation ensures participants processes and IT systems are ready to interact with AEMO's systems safely and securely, delivering data in the appropriate format in accordance with the B2B Procedures.

For more details, see B2B e-HUB Participant Accreditation and Revocation Process.

Accreditation does not include requirements related to the quality of data in the transactions or any back office processes.

Once accredited, participants can use the e-Hub to send and receive the following communications to other e-Hub participants:

- Documents conforming to the current aseXML schema.
- CSV data (where applicable).

Where to complete self-accreditation

Participants can complete their self-accreditation using any Delivery Method and e-Hub Interface they choose. They use the B2B e-Hub Self-Accreditation interface in the pre-production MSATS B2B Browser to monitor test progress, submit results, and view self-accreditation outcomes.

You do not need accreditation to use the pre-production environment.

You use the B2B Responder and API or FTP calls (as appropriate). The *B2B e-Hub* monitors and communicates your results. For more details, see Complete Self-Accreditation on page 15.





Can accreditation be revoked?

Yes, AEMO may revoke your accreditation if:

- You are no longer a B2B Party.
- You do not comply with the Rules or the authorised procedures.
 At AEMO's discretion it may issue a notice of non-compliance for any failure to comply with Rule 4(a)(ii). The notice of non-compliance includes a time frame to rectify the non-compliance.

Re-accreditation

Re-accreditation is required if you:

You must advise AEMO of the scope of any proposed changes to your gateway, system or delivery method so AEMO can determine the extent of reaccreditation needed.

- Make significant changes to your transaction, gateway system, or both.
- Implement a new transaction, gateway system, or both.
- Change delivery methods, for example, move from an FTP to an API gateway.

For more details, see B2B e-HUB Participant Accreditation and Revocation Process.

Is there exemption from accreditation?

No. All parties wanting to use the B2B e-Hub must become accredited as B2B e-Hub Participants.





Is there exemption from self-accreditation?

Yes. Exempted from completing self-accreditation are:

- Applicants using only the MSATS B2B Browser to send and receive B2B messages.
- Applicants currently using B2B via FTP only complete Stage 2 Testing.

If you believe you do not need to test all required transactions for your role, you can discuss with AEMO's Metering team to gain approval not to test those transactions. For help, contact **AEMO's Support Hub**.



Accreditation process

To satisfy AEMO that your key business personnel is technologically prepared to interact with the *B2B e-HUB*, intending *B2B e-Hub Participants* follow the process below.

Prerequisites

Self-accreditation preparation

Self-accreditation tasks


Accreditation process

Application rejected

Accreditation granted

Participant IDs


Market roles

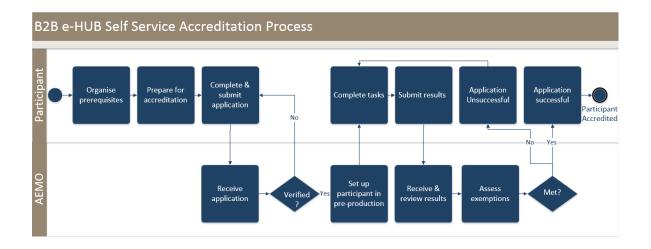

Prerequisites

Before you complete the application form, you need:

 One or more AEMO registered Participant IDs or a suggested Participant ID (for example, third party B2B participants). For more details, see Participant IDs on page 13.

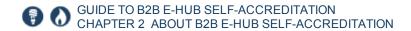



- A configured Delivery Method, for example: FTP, API Gateway (push/push pattern), API Web Services (push/pull pattern). For more details, see Shared Market Protocol Technical Guide.
- 3. To decide which interface you will use for testing, either Batch Handler Transactions, B2B Browser Transactions, or Web Services. For more details, see **Guide to MSATS B2B** or **SMP Technical Guide**.
- 4. A network connection, either MarketNet or internet. For more details, see Web portal requirements on page 1
- A current MSATS user profile (B2B Browser > User Profile). To ensure AEMO can easily contact you with any queries and you receive an email copy of your test results. For help, see Guide to MSATS Web Portal.
- 6. User rights access to the entities required to complete self-accreditation. for help, see B2B Self-Accreditation user rights access on page 4

For more details about the prerequisites, pre-reading list, accreditation process, required tests, and to obtain the application form, see *B2B e-Hub* Participant Accreditation and Revocation Process.

Self-accreditation preparation

To prepare for self-accreditation:

- 1. Complete the pre-reading.
- 2. Review the required transactions to test for your role.

 If you believe you do not need to test all required transactions for your role, you can discuss with AEMO's Metering team to gain approval not to test those transactions. For help, contact (missing or bad snippet)
- 3. Prepare and submit your application to AEMO.
- 4. On receipt of your application, AEMO reviews it to ensure you have completed all required information. If not, AEMO will seek further information from you.
- 5. Within five business days of receiving the application, AEMO advises you if your application is accepted or rejected and what you need to do.



If accepted, AEMO grants you access to the pre-production B2B e-Hub
interface and the B2B Responder so you can complete the self-accreditation
process. For more information see Web portal requirements on page 1 and B2B
Self-Accreditation user rights access on page 4

Self-accreditation tasks

This topic is a brief overview of the accreditation tasks, for more details, see Complete Self-Accreditation on page 15.

To complete the self-accreditation process:

Participants currently using B2B via FTP only complete stage 2 testing.

- If required, set up your sending and receiving protocol, either FTP or API, for each transaction. For help, see Set up B2B Delivery Method on page 15.
- If required, complete stage 1 testing Messaging Monitoring.
 Messaging tests your ability to connect with the B2B e-HUB using an FTP connection, an API connection, or both. For help, see Complete the tests on page 16.
- Complete stage 2 testing Transaction Monitoring.
 Transactions tests your ability to submit, receive, and respond to valid aseXML transactions, relevant to your role.
- 4. Monitor your test progress. For help, see Monitor test progress on page 18.
- 5. Submit your results to AEMO. For help, see Submit test results to AEMO on page 20.

Stage one accreditation testing

A successful stage one test is where you have successfully tested one of the following:

- 1. FTP messaging
- 2. API messaging
- 3. FTP and API messaging



Successful stage 1 FTP testing

FTP Messages initiated by the participant

Tests pass if an FTP message is successfully message acknowledged by the B2B Responder.

FTP Messages initiated by the B2B Responder

Tests pass if an FTP message is successfully message acknowledged by the participant.

Successful stage 1 API testing

For API messages initiated by the participant using the push/push or push/pull pattern

Tests pass if an API message is successfully message acknowledged by the B2B Responder.

For API messages initiated by the B2B Responder:

Tests pass if an API message is successfully message acknowledged by the participant using the push/push or push/pull pattern.

Stage 2 accreditation testing

For transactions initiated by the participant

Tests pass if the transaction is successfully Transaction Acknowledged by the B2B Responder and the transaction status is **Completed** or **Transaction Acknowledged Waiting for a Response**.



For transactions initiated by the B2B Responder

Tests pass if you respond with a Transaction Acknowledgement and the transaction status is either Completed or Transaction Acknowledged Waiting for a Response.

Application rejected

If AEMO considers that you did not met the requirements, it sends you notification explaining:

- The criteria you did not meet.
- How you can address the matter.
- The date you must address the unmet criteria for reconsideration.
 If you fail to address the unmet criteria by the date specified, AEMO deems your application withdrawn

Accreditation granted

When AEMO grants your accreditation:

- You become a B2B e-Hub Participant.
- You can connect to the production B2B e-Hub environment.
- You can use the *B2B e-Hub* to send and receive messages, conforming to the current aseXML schema, to and from other *B2B e-Hub Participants*.

Participant IDs

In the application form, applicants can use their existing Participant IDs or apply for new ones.



Market roles

Because the application for accreditation is based on Participant IDs, a separate Participant ID is required for each market role. However, some roles allow for the same Participant ID, such as:

- FRMP and ROLR
- . LNSP and initial MC

The B2B e-Hub market roles are:

- Retailer
- DNSP: Distribution Network Service Provider
- MP: Meter Provider
- MDP: Meter Data Provider
- MC: Meter Coordinator
- ENM Embedded Network Manager

Applicants must complete transaction testing related to their registered Participant ID role.





CHAPTER 3 COMPLETE SELF-ACCREDITATION

Set up B2B Delivery Method	15
Access B2B Self-Accreditation	
Complete the tests	16
Monitor test progress	
Submit test results to AEMO	

Participants can complete their self-accreditation using any Delivery Method and

e-Hub Interface they choose. They use the B2B e-Hub Self-Accreditation interface in the MSATS B2B Browser to monitor test progress, submit results, and view self-accreditation outcomes.

If you have multiple market roles, you must submit test results for each role you seek accreditation for. For help, see Market roles on page 14.

Set up B2B Delivery Method

This topic describes how to set up your B2B delivery method for sending and receiving transactions.

To set up your preferred delivery method:

 Access the B2B Browser > Protocols and Transforms interface. For help, see B2B Transforms and Protocol on page 1. This step is only required if you are changing your delivery method or setting it up for the first time.

2. Set up your sending and receiving protocol, either FTP or API. For help, see Select your protocol preference on page 1.

Access B2B Self-Accreditation

 Access the MSATS pre-production environment: https://msats.preprod.nemnet.net.au/msats/. For help, see Web portal requirements on page 1.





- In the MSATS main menu, click B2B Browser and then B2B Self-Accreditation.
- The interface displays with the list of tests you must complete to acquire accreditation or a list of your tests in progress. For an example, see Complete the tests below.



Complete the tests

Before commencing the accreditation tasks, complete the prerequisites and accreditation preparation, see Accreditation process on page 9.

 If required by your role, complete stage 1 testing - Messaging related to your Participant ID role.
 Below is an example of the interface.

Participants currently using B2B via FTP only complete stage 2 testing.






Protocol	API Name	Resource	Message Direction	Test Outcome
FTP			Send .zip	No Match Found
FTP			Receive .zip	No Match Found
API	B2BMessagingAsync	/messageAcknolwedgements	e-hub to Participant	No Match Found
API	B2BMessagingPull	/messageAcknowledgements	e-hub to Participant	No Match Found
API	B2BMessagingAsync	/messages	e-hub to Participant	No Match Found
API	B2BMessagingAsync	/messageAcknolwedgements	Participant to e-hub	No Match Found
API	B2BMessagingAsync	/messages	Participant to e-hub	No Match Found
API	B2BMessagingPull	/messages	Participant to e-hub	No Match Found

2. All intending *B2B e-Hub Participants* complete stage 2 testing - **Transactions**. Below is an example of the interface.

Where No Match Found displays in the Test Outcome column, you must provide an Exemption Reason.

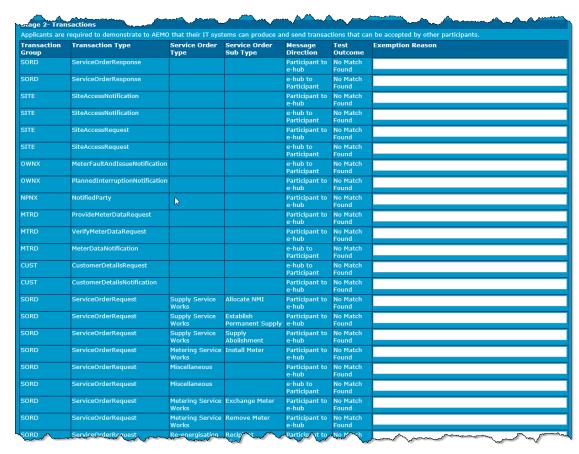





Monitor test progress

- Access the B2B Self-Accreditation interface. For help, see Monitor test progress above.
- 2. Use the drop-down arrows to:
 - Select the Role you are seeking accreditation for.
 - Select the From and To Date range of the corresponding executed tests.
- 3. Click Search.



- 4. The interface displays with a summary of any tests you have in progress.
- 5. Next you can:
 - a. Provide reasons for exemption from stage 2 testing Transactions.
 - b. Select which results to submit to AEMO. For help, see Monitor test progress above.
 - c. Submit Results to AEMO. For help, see Submit test results to AEMO on page 20.
 - d. Download a csv file with your results.

For help, see B2B Self-Accreditation interface on the next page.





Figure 1 B2B Self-Accreditation interface







Submit test results to AEMO

To submit your results to AEMO:

- Access the B2B Self-Accreditation interface.
 For help, see Access B2B Self-Accreditation on page 15.
- 2. Select the results and click **Submit Results to AEMO**. For help, see **C** in Figure 1 on the previous page.
- 3. In the **Submit Results to AEMO** interface, review your result details, add any additional notes (optional), and click **Submit**.



4. Confirmation of your submission displays.





The accreditation results have been set to AEMO.
Return to the "Self-Accreditation" screen.

 AEMO reviews your results and if satisfied, accredits you to interact with the e-Hub, see Accreditation process on page 9.
 If AEMO are not satisfied with your test results it will notify you explaining why, see Application rejected on page 13.





NEEDING HELP

Related resources

These documents contain related information that may assist you. You can find them on AEMO's website.

- **aseXML Standards**, links to guidelines, schemas, change process, sample files, and white papers.
- **B2B e-HUB Participant Accreditation and Revocation Process**. Explains the process AEMO adopts when accrediting a person as a *B2B e-Hub Participant* to use the *B2B e-HUB* and the circumstances where AEMO can revoke accreditation
- **B2B Mapping to aseXML**, provides an understanding of the connection between aseXML and the B2B Procedures.
- **B2B Procedures**, The Business to Business (B2B) Procedures prescribe the content of, the processes for, and the information participants provide to support B2B Communication.
- **B2B Validation Module Software and Guide**, a validation application participants can embed in their B2B systems to validate an .XML file before it is deployed to the *B2B e-Hub*.
- **Shared Market Protocol (SMP) Technical Guide**, provides participants with the technical specifications for the delivery of B2B transactions using the *B2B e-Hub* APIs. This detail assists participants developing their own systems to utilise these APIs.

Setting a participant

Providing you have permission to do so, the **Set Participant** function allows you to act for another participant without having to log out, change IDs and log in again. The participant you are acting for is indicated in the top right of the Markets Portal. For permission to see other participant IDs using Set Participant, see your company's PA.





When you are using the Set Participant function, you can only log into MSATS once on the same computer.

To use Set Participant:

On the MSATS main menu, click Set Participant.
 If Set Participant is unavailable, you do not have the correct permissions. Ask your company's Participant Administrator to consider granting you access to use the Set Participant function. For help, see Guide to User Rights Management.



- 2. In the **Set Current Participant** interface, find the **Participant ID** you want to act for
- 3. The participant you are acting for displays in the top-right corner.




4. To return to the Participant ID you logged in with, click Set Participant and





Reset to <Participant ID> participant.

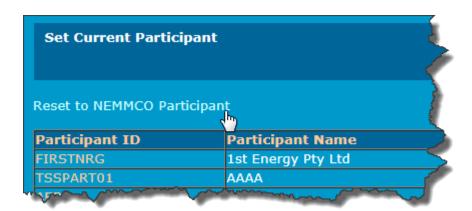

AEMO's Support Hub

Contacting AEMO's Support Hub

IT assistance is requested through one of the following methods:

• Phone: 1300 AEMO 00 (1300 236 600)

For non-urgent issues, normal coverage is 8:00 AM to 6:00 PM on weekdays, Australian Eastern Standard Time (AEST).

• Email: supporthub@aemo.com.au

AEMO recommends participants call AEMO's Support Hub for all urgent issues, whether or not you have logged a call in the Customer Portal.

Information to provide

Please provide the following information when requesting IT assistance from AEMO:

- Your name
- · company name





- Participant ID
- · System or application name
- Environment: production or pre-production
- Problem description
- Screenshots

For AEMO software-related issues please also provide:

- · Version of software
- Properties or log files
- Replication Manager support dump and instance name (if Data Interchange problem)

Feedback

Your feedback is important and helps us improve our services and products. To suggest improvements, please contact AEMO's Support Hub.





INDEX

A

Access B2B self-accreditation 15 Accreditation granted 13 Accreditation preparation 10 Accreditation process 9 Accreditation tasks 11 Application rejected 13

B

B2B Self-Accreditation user rights access 4

C

Can accreditation be revoked? 7 Complete the tests 16

Е

exemption from accreditation 7 exemption from self-accreditation 8

F

Feedback 25

M

Monitor test progress 18 MSATS Portal URLs 3

D

Prerequisites 9

R

Re-accreditation 7 Related resources 22

S

Set participant 5
Set up B2B Delivery Method 15
Setting a participant 22
Stage 2 accreditation testing 12
Stage one accreditation testing 11
Submit test results to AEMO 20
Successful API testing 12

Successful FTP testing 12 Supported Web Browsers 3 System requirements 3

U

user rights management (URM) entity 1

W

Where to obtain accreditation 6 Why obtain accreditation 6